



Before we can use this LDSBus RFID Reader, it must be configured.
Let's Get Started!


Please visit <http://brtsys.com/warranty> or scan the QR code for warranty registration with the UUID and Product Key below

STICKER AREA



Step 1.

With a USB-C to USB-A cable, connect the LDSBus USB Adapter to the PC.
(Both must be purchased separately)

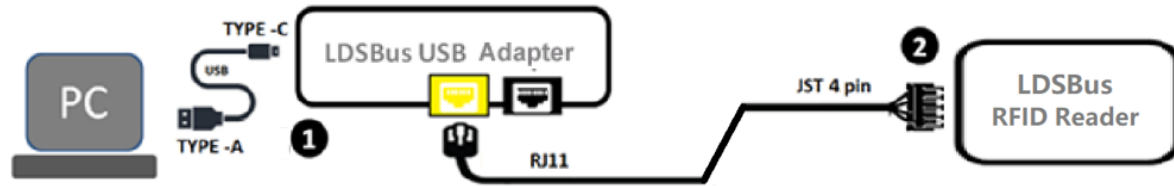

Step 2.

Connect the RJ11 end of the cable provided to the LDSBus USB Adapter, and the JST4 end to the LDSBus RFID Reader.

Step 3.

Scan the QR code or visit the link provided below for more details on LDSBus USB Adapter and LDSBus Configuration Utility.



<https://brtsys.com/resources/>

Step 4.

Download the LDSBus Configuration Utility. Complete the installation instructions.



Follow the LDSBus Configuration Utility Guide to complete the configuration. Upon completing the configuration, connect the LDSBus RFID Reader device to different platforms such as IoTPortal, PanL Room Manager or PanL Smart Living