

Modbus DO Sensor Adapter Datasheet



1 Introduction

The Modbus **D**issolved **O**xygen (**DO**) Sensor Adapter is designed to work with an analog galvanic probe to form a complete DO sensor. A BNC connector is built into the adapter for attaching such a probe.

The adapter and probe are calibrated using a single-point calibration procedure and the resulting sensor supports DO measurements ranging from 0 to 20 mg/L with a resolution of 0.01mg/L.

The sensor is suitable for use in water quality measurement applications such as nutrient tanks, fisheries and hatcheries, water treatment and sewage treatment plants, swimming pools, aquariums, and many other applications. Monitoring, alerting, and controlling the system can be done in real-time.

1.1 Features

- DO Sensor Adapter integrates directly with Analog Galvanic Dissolved Oxygen probe via BNC connector
- DO measurement range of 0 to 20 mg/L with linearized output and 0.01mg/L resolution
- Single point step-by-step guided calibration
- Implements Modbus protocol
- High report rate of 1 report every 5 seconds
- Low power consumption 88mW (5V)
- Operating temperature range: 0°C to +70°C
- Flush mount and DIN Rail Mount options

Visit <https://brtsys.com/resources/> for more information.



Neither the whole nor any part of the information contained in, or the product described in this manual, may be adapted, or Reproduced in any material or electronic form without the prior written consent of the copyright holder. This product and its documentation are supplied on an as-is basis and no warranty as to their suitability for any particular purpose is either made or implied. BRT Systems Pte Ltd (BRTSys) will not accept any claim for damages howsoever arising as a result of use or failure of this product. Your statutory rights are not affected. This product or any variant of it is not intended for use in any medical appliance, device, or System in which the failure of the product might reasonably be expected to result in personal injury. This document provides preliminary information that may be subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. BRT Systems Pte Ltd, 1 Tai Seng Avenue, Tower A, #03-01 Singapore 536464. Singapore Registered Company Number: 202220043R.

2 Part Numbers / Ordering Information

| Part Number | Description |
|--------------------|---|
| MS-1001-01A | Modbus Dissolved Oxygen (DO) Sensor Adapter |
| MA-0102-01A | Modbus RS485-RJ11 Cable (30cm) |
| LA-1201-01A | LDSBus DIN Rail Mount Set |

Table 1 - Part Numbers / Ordering Information

Table of Contents

| | | |
|---|---|-----------|
| 1 | Introduction | 1 |
| 1.1 | Features | 1 |
| 2 | Part Numbers / Ordering Information | 2 |
| 3 | Specifications | 4 |
| 4 | FCC Compliance Statement..... | 5 |
| 5 | Hardware Features | 6 |
| 6 | Sensor Adapter Configuration and Installation..... | 8 |
| 6.1 | Connection Diagram for Standard Modbus Power Supply | 8 |
| 6.2 | RS485-RJ11 Cable(30cm) | 9 |
| 7 | Mounting Instructions | 10 |
| 7.1 | Flush Mount..... | 10 |
| 7.2 | DIN Rail Mount..... | 10 |
| 8 | Modbus Registers | 11 |
| 9 | Mechanical Dimensions | 12 |
| 10 | System Status LED Indicators..... | 13 |
| 11 | Probe Selection | 14 |
| 12 | Contact Information | 15 |
| Appendix A – References | | 16 |
| Document References | | 16 |
| Acronyms and Abbreviations..... | | 16 |
| Appendix B – List of Figures and Tables..... | | 17 |
| List of Figures | | 17 |
| List of Tables..... | | 17 |
| Appendix C – Revision History | | 18 |

3 Specifications

| | | |
|---------------------------------|---------------------------|--|
| Features | Interface | BNC – DO probe connector RS485 Modbus RTU |
| | LED Indicator (RGB) | System Status Indicator (Please refer to LED section) |
| | Mounting | Flush Mount DIN Rail Mount |
| Power | Modbus Voltage | 9-24V DC Bus Power |
| | Device Input Voltage | 5V DC Bus Power |
| | Typical Power | 5V, 88mW |
| | Max. Power | 223mW |
| DO Sensor input module | Detection Range | 0– 20 mg/L |
| | Resolution | 0.01mg/L |
| | Response Time | <1Minute |
| | Calibration | 1 Point Calibration |
| Physical Characteristics | Color | White |
| | Housing | Polycarbonate |
| | Dimensions | L117.6mm x W42.9mm x H29.7mm |
| Environmental Limits | Operating Temperature | 0 to 70°C |
| | Storage Temperature | -20 to 85°C |
| | Ambient Relative Humidity | 5 to 95% (non-condensing) |
| Package Contents | Device | 1x Modbus Dissolved Oxygen Sensor Adapter |
| | Wire Assembly | 1x Modbus RS485-RJ11 Cable(30cm) |
| Optional | Mounting Accessories | 1x LDSBus DIN Rail Mount set |

Table 2 - Modbus Dissolved Oxygen Sensor Adapter Specifications

4 FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) These devices may not cause harmful interference, and
- (2) These devices must accept any interference received, including interference that may cause undesired operation.

NOTE: The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, at least 20cm of separation distance between the device and the user's body must be always maintained.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with the instructions provided and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



5 Hardware Features

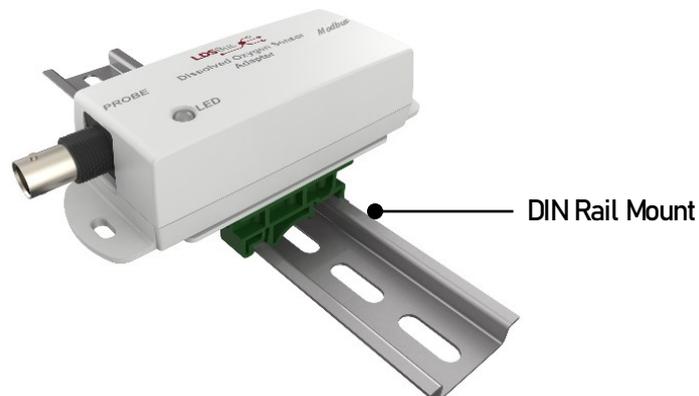
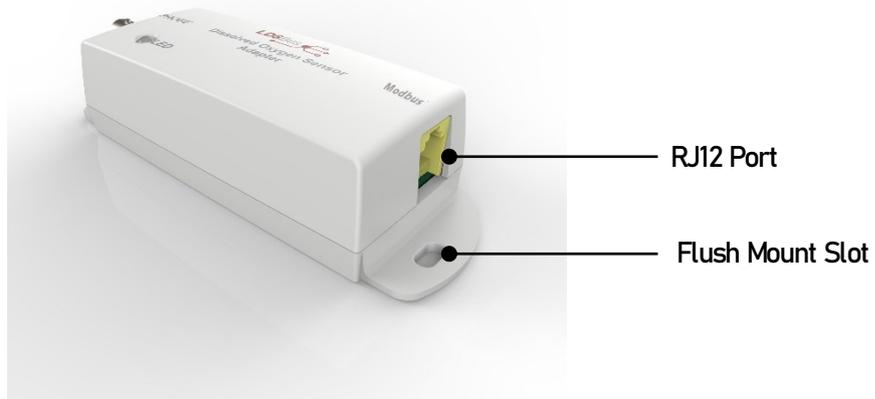
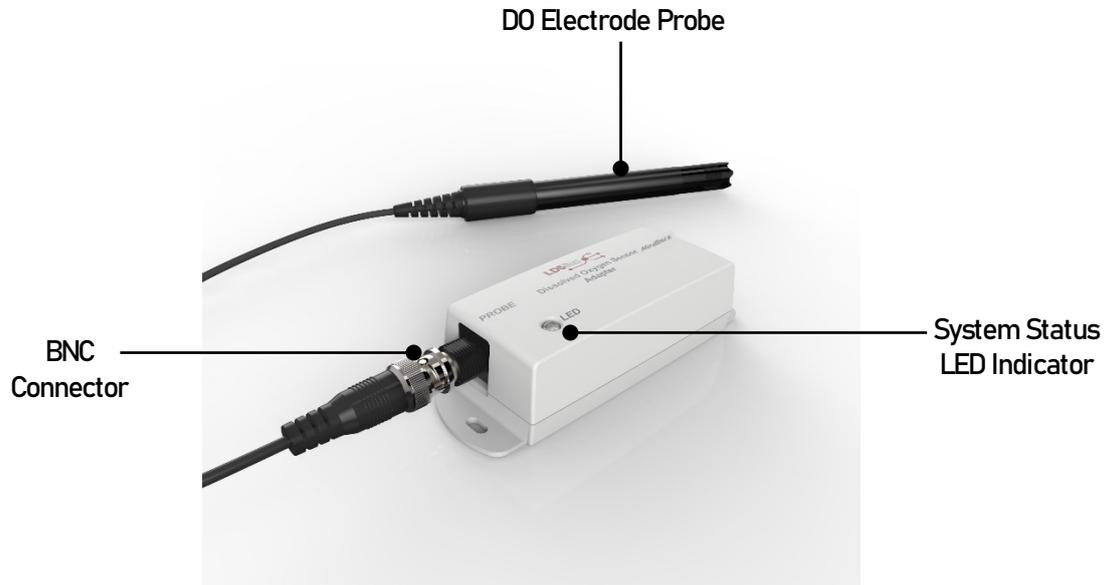


Figure 1 - Modbus Dissolved Oxygen Sensor Adapter Hardware Features

| Function | Labels | Description |
|-----------------------------|---------------|---|
| BNC Connector | Probe | Probe Interface |
| System Status LED Indicator | LED | Modbus status LED |
| RJ12 Port | Modbus | Modbus data and power interface port. The physical port is RJ12. The connection interface can be RJ11/RJ12. |

Table 3 - Modbus DO Sensor Adapter Hardware Features

6 Sensor Adapter Configuration and Installation

Please visit <https://brtsys.com/resources/software/utility-tools> to access the Modbus Configuration Utility guide on how to configure the device name, device address and termination settings before using it for your specific application.

6.1 Connection Diagram for Standard Modbus Power Supply

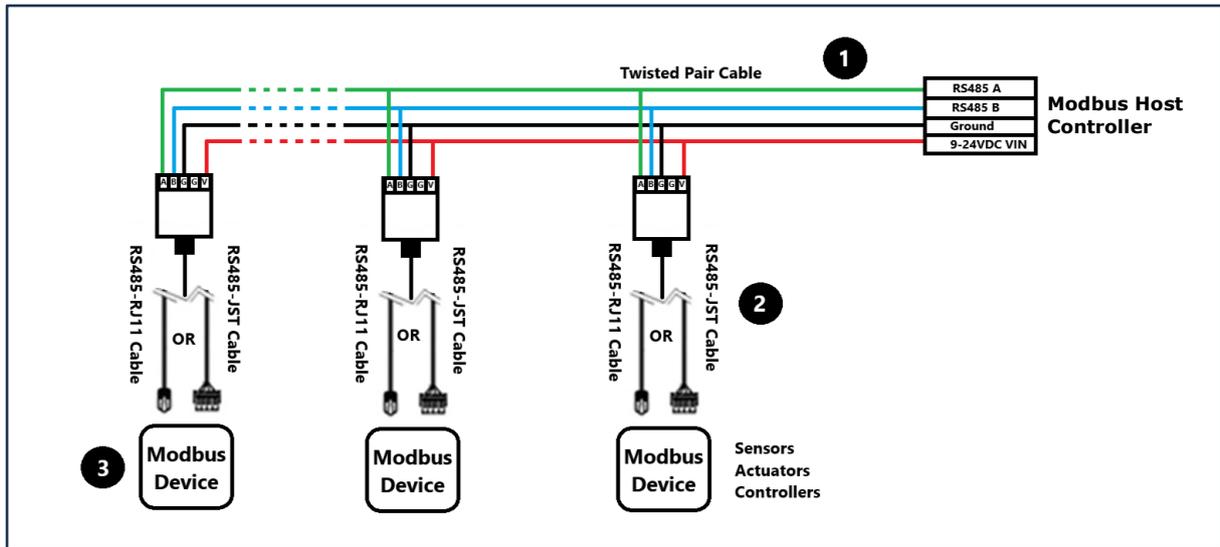


Figure 2 - Connection Diagram for Standard Modbus Power Supply

Setup Instructions:

1. Use a Cat5e/Cat6e RJ45 Twisted Pair Cable to connect the Modbus controller (Host) to the network for RS485 communication and power.
2. Connect each Modbus device to the network using either an RS485-JST cable or an RS485-RJ11 cable, as provided with the device.
3. BRTSys Modbus devices have built-in bus termination resistors. These resistors can be enabled or disabled by using the BRTSys [Modbus Configuration Utility](#). When installing the device as the last device on the bus, these terminations may be used to terminate the bus.

6.2 RS485-RJ11 Cable(30cm)

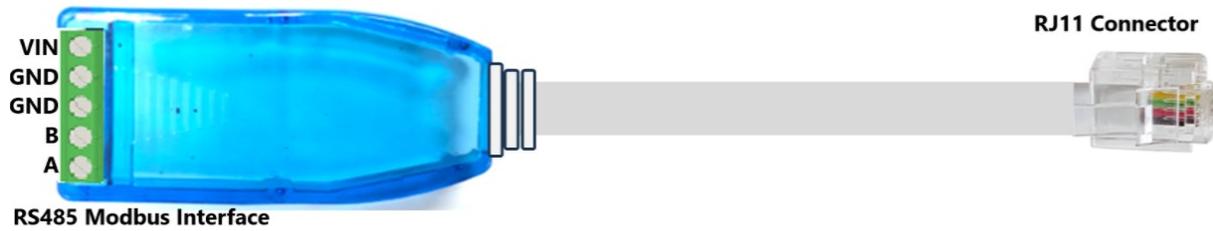


Figure 3 - RS485-RJ11 Cable(30cm)

| PIN Legend | Function |
|-------------------|------------------------------|
| VIN | Modbus Input Voltage 9-24VDC |
| GND | Ground |
| GND | Ground |
| B | RS485-B |
| A | RS485-A |

Table 4 - RS485-RJ11 Cable(30cm) Pin Configuration

7 Mounting Instructions

7.1 Flush Mount

The Modbus DO Sensor Adapter can be flush mounted directly on a wall or any flat surface using 2 M3.5*16mm (thread) screws.

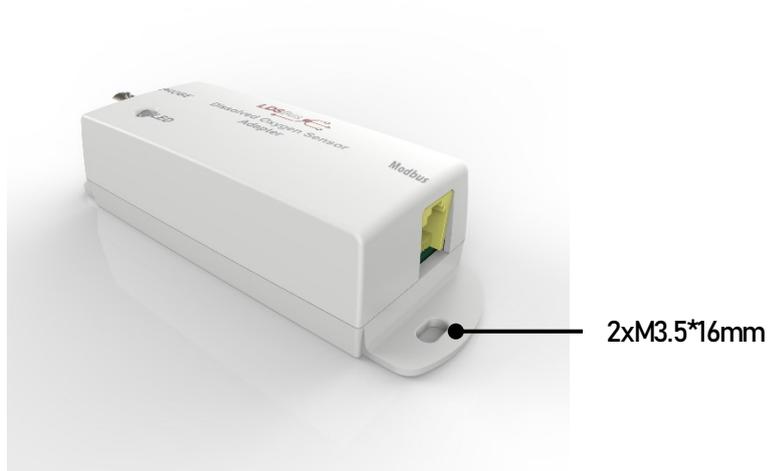


Figure 4 - Modbus Dissolved Oxygen Sensor Adapter Flush Mount

7.2 DIN Rail Mount

The DIN Rail Mount can be fixed using a DIN Rail bracket that has two mounting holes. The package includes mounting screws and a backplate. (The DIN Rail Bracket is not included in the package).

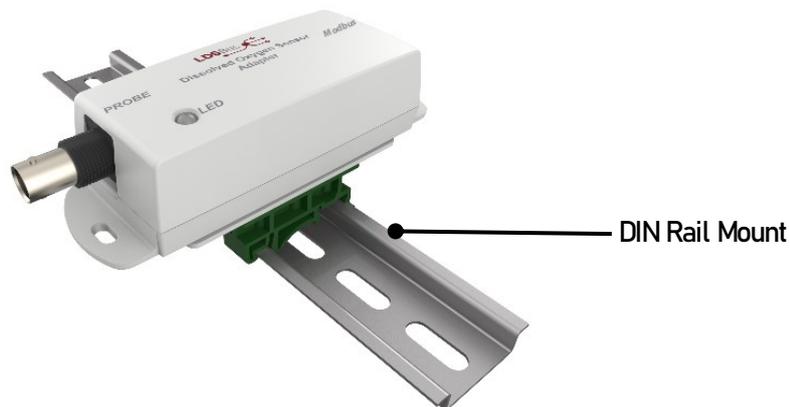


Figure 5 - Modbus Dissolved Oxygen Sensor Adapter DIN Rail Mount

8 Modbus Registers

| Parameter | Starting Address | Quantity of Registers | Supported Function Code | Parameter Range and Description | Default |
|--|------------------|-----------------------|-------------------------|--|-----------------|
| Address⁽¹⁾ | 0000H | 1 | 0x03/0x10 | 1 to 126 | 126 |
| RS485 Termination⁽¹⁾ | 0001H | 1 | 0x03/0x10 | 0 - Termination OFF 1 - Termination ON | Termination OFF |
| Baud Rate⁽¹⁾ | 0002H | 1 | 0x03/0x10 | 0 - 1200 bps 1 - 2400 bps 2 - 4800 bps 3 - 9600 bps 4 - 19200 bps 5 - 38400 bps 6 - 115200 bps | 9600 bps |
| Parity⁽¹⁾ | 0003H | 1 | 0x03/0x10 | 0 - None 1 - Odd 2 - Even | Even |
| Status LED Enable⁽¹⁾ | 0004H | 1 | 0x03/0x10 | 0 - LED OFF 1 - LED ON | LED ON |
| Environment Temperature | 0005H | 1 | 0x03/0x10 | Environment temperature 0 to 40 °C | N/A |
| Sensor Calibration Version | 0006H | 1 | 0x03/0x10 | 0x0090 – if calibrated, 0xFFFF no calibration available | 0xFFFF |
| Sensor Calibrated Date | 0007H | 2 | 0x03/0x10 | Calibration date YYYYMMDD 0x20221203 | N/A |
| Sensor Calibrated Constant | 0009H | 1 | 0x03/0x10 | Constant value = 0x0004 | 0x0004 |
| Sensor Calibrated Voltage | 000AH | 1 | 0x03/0x10 | In millivolt (mV) | N/A |
| Sensor Calibrated Temperature | 000BH | 2 | 0x03/0x10 | Temperature | N/A |
| Cal XOR Checksum Value | 000DH | 1 | 0x03/0x10 | XOR Checksum from registers 06H to 0CH | N/A |
| Device UUID | 0026H | 8 | 0x03 | MSxxxxxxxxxxxxyy where x is ASCII character and yy is 16-bit running number | N/A |
| Device Firmware Version | 002EH | 1 | 0x03 | 0xXXMN XX – Not concerned M – Major N - Minor | N/A |
| Device Part Number | 002FH | 1 | 0x03 | Device ID | 0x800C |
| Reserved | 0030H | N/A | N/A | Reserved | N/A |
| DO | 0031H | 1 | 0x03 | 0 - 20000 (0 - 20 mg/L) | N/A |
| Sensor ADC data | 0032H | 1 | 0x03 | 0-1023 | N/A |
| Reset | 0150H | 1 | 0x06 | Write 1 to reset | N/A |
| Reserved | 0151H | N/A | N/A | Reserved | N/A |
| Identify | 0152H | 1 | 0x06 | Write 1 to start blinking the device @1Hz for 10 seconds | N/A |

Table 5 - Modbus Registers

⁽¹⁾This indicates that any updates to these communication/status register(s) will only take effect after the device has been rebooted.

9 Mechanical Dimensions

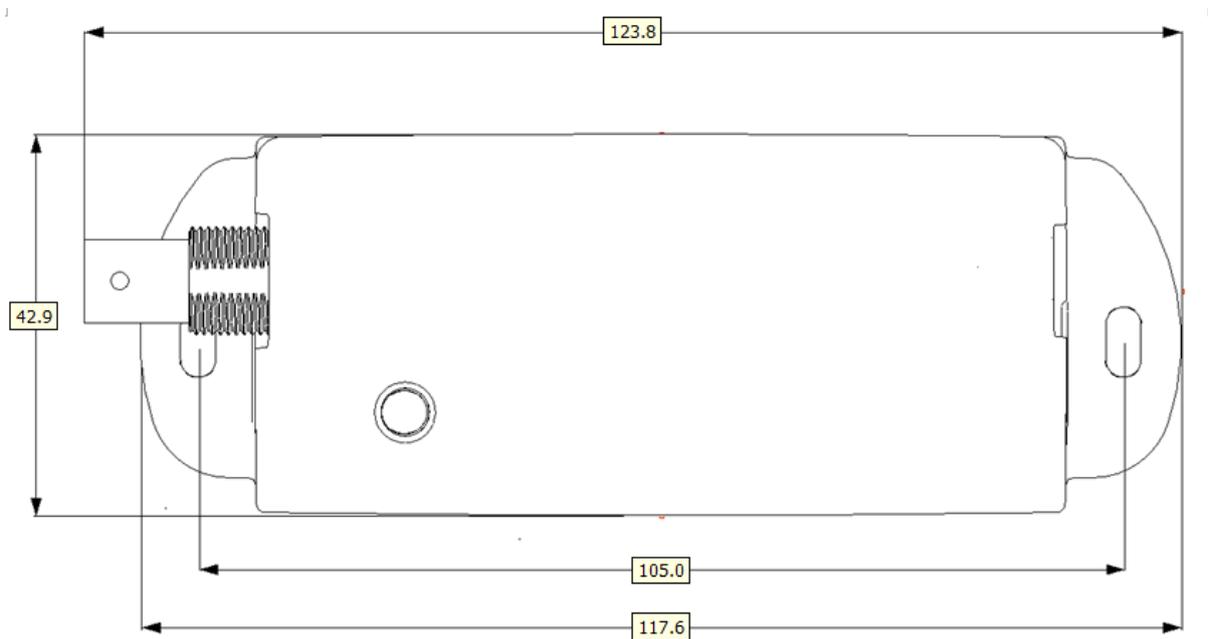


Figure 6 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Top View



Figure 7 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Side View

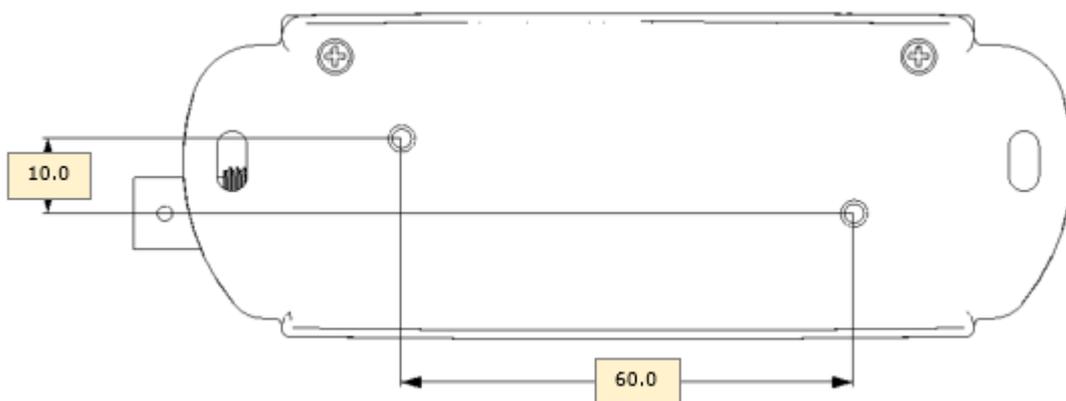


Figure 8 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Bottom View

Note: All dimensions are in millimetres.

10 System Status LED Indicators

| Device Status | LED Color | | Flashing Frequency | Description |
|----------------------------|---------------------------|---|---------------------------|----------------------------|
| Termination ON | BLUE |  | Steady – Non-flashing | |
| Termination OFF | GREEN |  | Steady – Non-flashing | |
| Device Configuration Error | RED |  | Steady – Non-flashing | Device configuration error |
| Communication | RED/GREEN/ BLUE/YELLOW | - | Blink twice (Short blink) | Device in communication |
| Firmware update | YELLOW |  | Steady – Non-flashing | Device firmware update. |

Table 6 - System Status LED Indicators

Note:

1. For reliable communication, ensure that the power supply and the RS485 termination settings are correct.
2. Ensure that the Modbus address and baud rate are configured correctly before deployment.

11 Probe Selection

The following specifications are recommended for selecting Dissolved Oxygen Probe -

| | | |
|-----------------|---|----------------|
| Type | : | Galvanic Probe |
| Detection Range | : | 0-50mg/L |
| Connector | : | BNC |

12 Contact Information

Refer to <https://brtsys.com/contact-us/> for contact information.

System and equipment manufacturers and designers are responsible to ensure that their systems, and any BRT Systems Pte Ltd (BRTSys) devices incorporated in their systems, meet all applicable safety, regulatory and system-level performance requirements. All application-related information in this document (including application descriptions, suggested BRTSys devices and other materials) is provided for reference only. While BRTSys has taken care to assure it is accurate, this information is subject to customer confirmation, and BRTSys disclaims all liability for system designs and for any applications assistance provided by BRTSys. Use of BRTSys devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify, and hold harmless BRTSys from any and all damages, claims, suits, or expense resulting from such use. This document is subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Neither the whole nor any part of the information contained in, or the product described in this document, may be adapted, or reproduced in any material or electronic form without the prior written consent of the copyright holder. BRT Systems Pte Ltd, 1 Tai Seng Avenue, Tower A, #03-01, Singapore 536464. Singapore Registered Company Number: 202220043R.

Appendix A – References

Document References

[Modbus Configuration Utility User Guide](#)

Acronyms and Abbreviations

| Terms | Description |
|--------------|-------------------------------|
| DO | Dissolved Oxygen |
| LED | Light Emitting Diode |
| UUID | Universally Unique Identifier |

Appendix B – List of Figures and Tables

List of Figures

| | |
|---|----|
| Figure 1 - Modbus Dissolved Oxygen Sensor Adapter Hardware Features | 6 |
| Figure 2 - Connection Diagram for Standard Modbus Power Supply | 8 |
| Figure 3 - RS485-RJ11 Cable(30cm)..... | 9 |
| Figure 4 - Modbus Dissolved Oxygen Sensor Adapter Flush Mount..... | 10 |
| Figure 5 - Modbus Dissolved Oxygen Sensor Adapter DIN Rail Mount | 10 |
| Figure 6 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Top View..... | 12 |
| Figure 7 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Side View..... | 12 |
| Figure 8 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Bottom View | 12 |

List of Tables

| | |
|--|----|
| Table 1 - Part Numbers / Ordering Information | 2 |
| Table 2 - Modbus Dissolved Oxygen Sensor Adapter Specifications..... | 4 |
| Table 3 - Modbus DO Sensor Adapter Hardware Features..... | 7 |
| Table 4 - RS485-RJ11 Cable(30cm) Pin Configuration | 9 |
| Table 5 - Modbus Registers | 11 |
| Table 6 - System Status LED Indicators | 13 |

Appendix C – Revision History

Document Title: Modbus DO Sensor Adapter Datasheet
Document Reference No.: BRTSYS_000166
Clearance No.: BRTSYS#102
Product Page: <https://brtsys.com/product-category/adapters/>
Document Feedback: [Send Feedback](#)

| Revision | Changes | Date |
|-------------|--|------------|
| Version 1.0 | Initial Release | 22-05-2025 |
| Version 1.1 | Added a note (under Modbus Registers table) to highlight that that any updates to some of the communication/status register(s) will only take effect after the device has been rebooted. | 09-07-2025 |